



# BATTERY KIT

**EN.** Portable diesel transfer unit. Self-priming electric vane pump run by a 12V or 24 V DC electric motor. Cast iron body. Fixed brush motor with permanent magnet stator. Suction capacity up to 2 metres. Terminal board with switches and fuses to protect against overload. 2 metre cables with clips for battery connection. 4 meter fuel pipe, diameter 3/4". Aluminium manual nozzle. Bottom suction filter.

**ES.** Unidad móvil para el trasiego de gasolina. Electrobomba auto cebante de paletas con motor de 12V ó 24V y electricidad DC. Estructura de hierro fundido. Motor de escobillas con estator de imanes permanentes. Capacidad de aspiración de hasta 2 metros. Caja de conexiones con interruptor y fusible para protección de sobrecargas. Cables de 2 metros con pinzas de conexión a la batería. Tubo de 4 metros para carburantes, de 3/4" de diámetro. Pistola manual de aluminio. Filtro de pie para tubo de aspiración.

**PT.** Grupo portátil para transferência de gasóleo. Electrobomba de palhetas autoescorvante com motor de 12 ou 24 Vdc de corrente continua. Corpo de ferro gusa. Motor de escovas com estator de magnetes permanentes. Capacidade de aspiração de até 2 metros. Caixa de bornes com interruptor e fusível para protecção contra sobrecarga. Cabos de 2 metros com grampos para prender a uma bateria. Tubo de 4 metros para carburante, de 3/4" de diámetro. Pistola manual de alumínio. Filtro no fundo para tubo de aspiração.

## PERFORMANCE

- Flow rate up to 50 l/min
- 12 - 24 V DC operation
- Duty cycle 30 min.

- Caudal hasta 50 l/min
- Funcionamiento 12V - 24V DC
- Ciclo de funcionamiento 30 min.

- Caudal até 50 l/min
- Funcionamento 12 - 24 V DC
- Ciclo de trabalho 30 min.



## PRODUCTS' RANGE WEIGHT AND PACKAGING

Code	Weight		Packaging		
	kg	lbs	mm	inch	pcs/box
<b>BATTERY KIT 3000</b>					
F0022500C	7,8	17,3	300x300x180	18,8x11,8x7,1	1
F0022600C	7,8	17,3	300x300x180	18,8x11,8x7,1	1
F00225410	7,8	17,3	300x300x180	18,8x11,8x7,1	1
F00226380	7,8	17,3	300x300x180	18,8x11,8x7,1	1
<b>BATTERY KIT PANTHER</b>					
F0034003B	7,8	17,3	300x300x180	18,8x11,8x7,1	1
F0034103C	7,8	17,3	300x300x180	18,8x11,8x7,1	1
F0034006B	12,5	27,6	357x357x275	14,1x14,1x10,8	1
F00341220	13	28,7	357x357x275	14,1x14,1x10,8	1
F0034106C	12,5	27,6	357x357x275	14,1x14,1x10,8	1
<b>BATTERY KIT BIPUMP</b>					
F00363280	18	39,7	480x370x265	18,9x14,6x10,4	1
<b>CARRY 3000</b>					
F0022300C	7,8	17,3	300x300x180	18,8x11,8x7,1	1
F0022400C	7,8	17,3	300x300x180	18,8x11,8x7,1	1




Flow-rate

up to  
**50** l/min  
(up to 10 gpm)



BATTERY KIT 3000

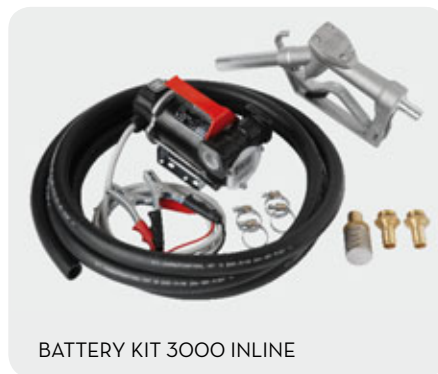

BATTERY KIT 3000 INLINE



BATTERY KIT PANTHER



BATTERY KIT OIL



BATTERY KIT BIPUMP

Delivery hose 6 m  
Cable lenght 4 m  
Automatic nozzle

FEATURES

ON REQUEST




Handle



On/Off switch



Automatic nozzle

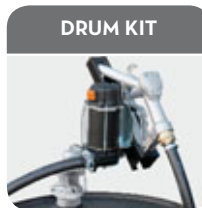

DRUM KIT

PRODUCTS' RANGE TECHNICAL DATA

Code	Description	Flu-ids type	Flow-rate		Voltage			Fuses capacity	Pump mod.	Duty cycle min.	Nozzle type	Hose		Foot filter
			l/min	gpm	AC V/Hz DC Volt	Power Watt	Amp. max.					length	Ø	
<b>BATTERY KIT 3000</b>														
F0022500C	BATTERY KIT 3000 12V	D	50	13	12	220	22	25	Carry 3000	30	Man.	4 m	3/4"	YES
F0022600C	BATTERY KIT 3000 24V	D	50	13	24	310	13	15	Carry 3000	30	Man.	4 m	3/4"	YES
F00225410	BATTERY KIT 3000 INLINE 12V	D	50	13	12	220	22	25	Carry 3000	30	Man.	4 m	3/4"	YES
F00226380	BATTERY KIT 3000 INLINE 24V	D	50	13	24	310	13	15	Carry 3000	30	Man.	4 m	3/4"	YES
<b>BATTERY KIT PANTHER</b>														
F0034003B	BATTERY KIT Panther 12V	D	56	15	12	300	35	40	Panther DC	30	Man.	4 m	3/4"	YES
F0034103C	BATTERY KIT Panther 24-12V	D	70/35	18/9	24/12	420/150	25/16	30/30	Panther DC	30	Man.	4 m	3/4"	YES
F0034006B	BATTERY KIT Panther 12V	D	56	15	12	420	35	-	Panther DC	30	Man.	5 m	3/4"	YES
F00341220	BATTERY KIT Panther 12-24V	D	35/70	9/18	12/24	600/200	25/16	-	Panther DC	30	Aut.	5 m	3/4"	YES
F0034106C	BATTERY KIT Panther 12-24V	D	35/70	9/18	12/24	600/200	25/16	-	Panther DC	30	Man.	5 m	3/4"	YES
<b>BATTERY KIT BIPUMP</b>														
F00363280	BATTERY KIT Bipump 12V	D	80	21	12	300	22	-	Bipump DC	30	Aut.	6 m	1"	YES
<b>BATTERY KIT OIL</b>														
F00309060	Battery Viscomat/12 V	O	10	3	12	300	22	-	Viscomat DC	30	Man.	4 m	3/4"	YES
F00310070	Battery Viscomat/24 V	O	10	3	24	300	18	-	Viscomat DC	30	Man.	4 m	3/4"	YES

Upon request it is available with different voltages and 60 Hz frequency